LUXURY DECK HATCH **HULL/FRP** HULL/FRP

INSTALLATION:

- 1. DIG THE HOLE PER THE SPECIFICATION FOR CUT SIZE OF HATCH IN HULL WALL OR DECK.
- 2. FULL-FILL SEAL COMPOUND ON THE POSITION "A". HATCH TO BE INSTALLED ON DECK DOWN, OR OUTSIDE BOAT INSTALL HATCH TOWARD INSIDE. AND SCREW BOLT (B) INTO HULL.

Man Ship

Australian Distributor: DeckHardware www.deckhardware.com.au 02 9905 9400