



CABINET LATCH

How To Use It:

To install cabinet latch(A,B,C & D)on panel first,

then take C & D out and kept it with E. once the painting of panel is finished, please install C,D & E to A,B to avoid scrape.

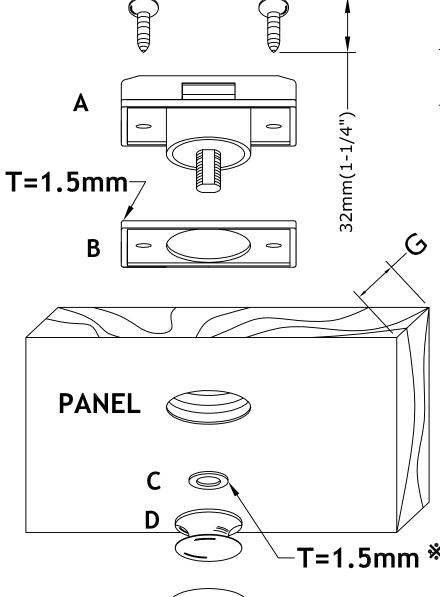

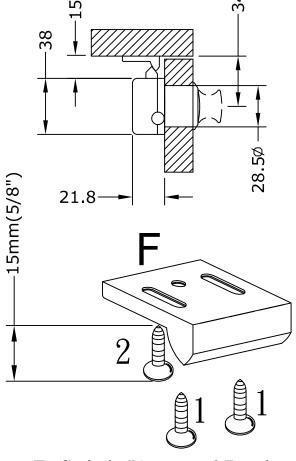

To fix bolt #1 to panel F and adjust F to a suitable location. To prevent movement, so the bolt #2 need to be screwed.

Necessary parts:

If panel thickness (G) is 1/2",pls use B 4pcs.

If panel thickness (G) is 5/8",pls use B 2pcs.

If panel thickness (G) 3/4"is of standard size, so not need to use B & C.

T=1.5mm * If panel thickness is 7/8",pls use C 2pcs.

If panel thickness is 1",pls use C 4pcs.

Australian Distributor: DeckHardware www.deckhardware.com.au 02 9905 9400